


COMPONENT ORIENTATION CORRECT WHEN TRACTOR IS VIEWED FROM ABOVE FROM LEFT (DISTRIBUTOR) SIDE OF TRACTOR

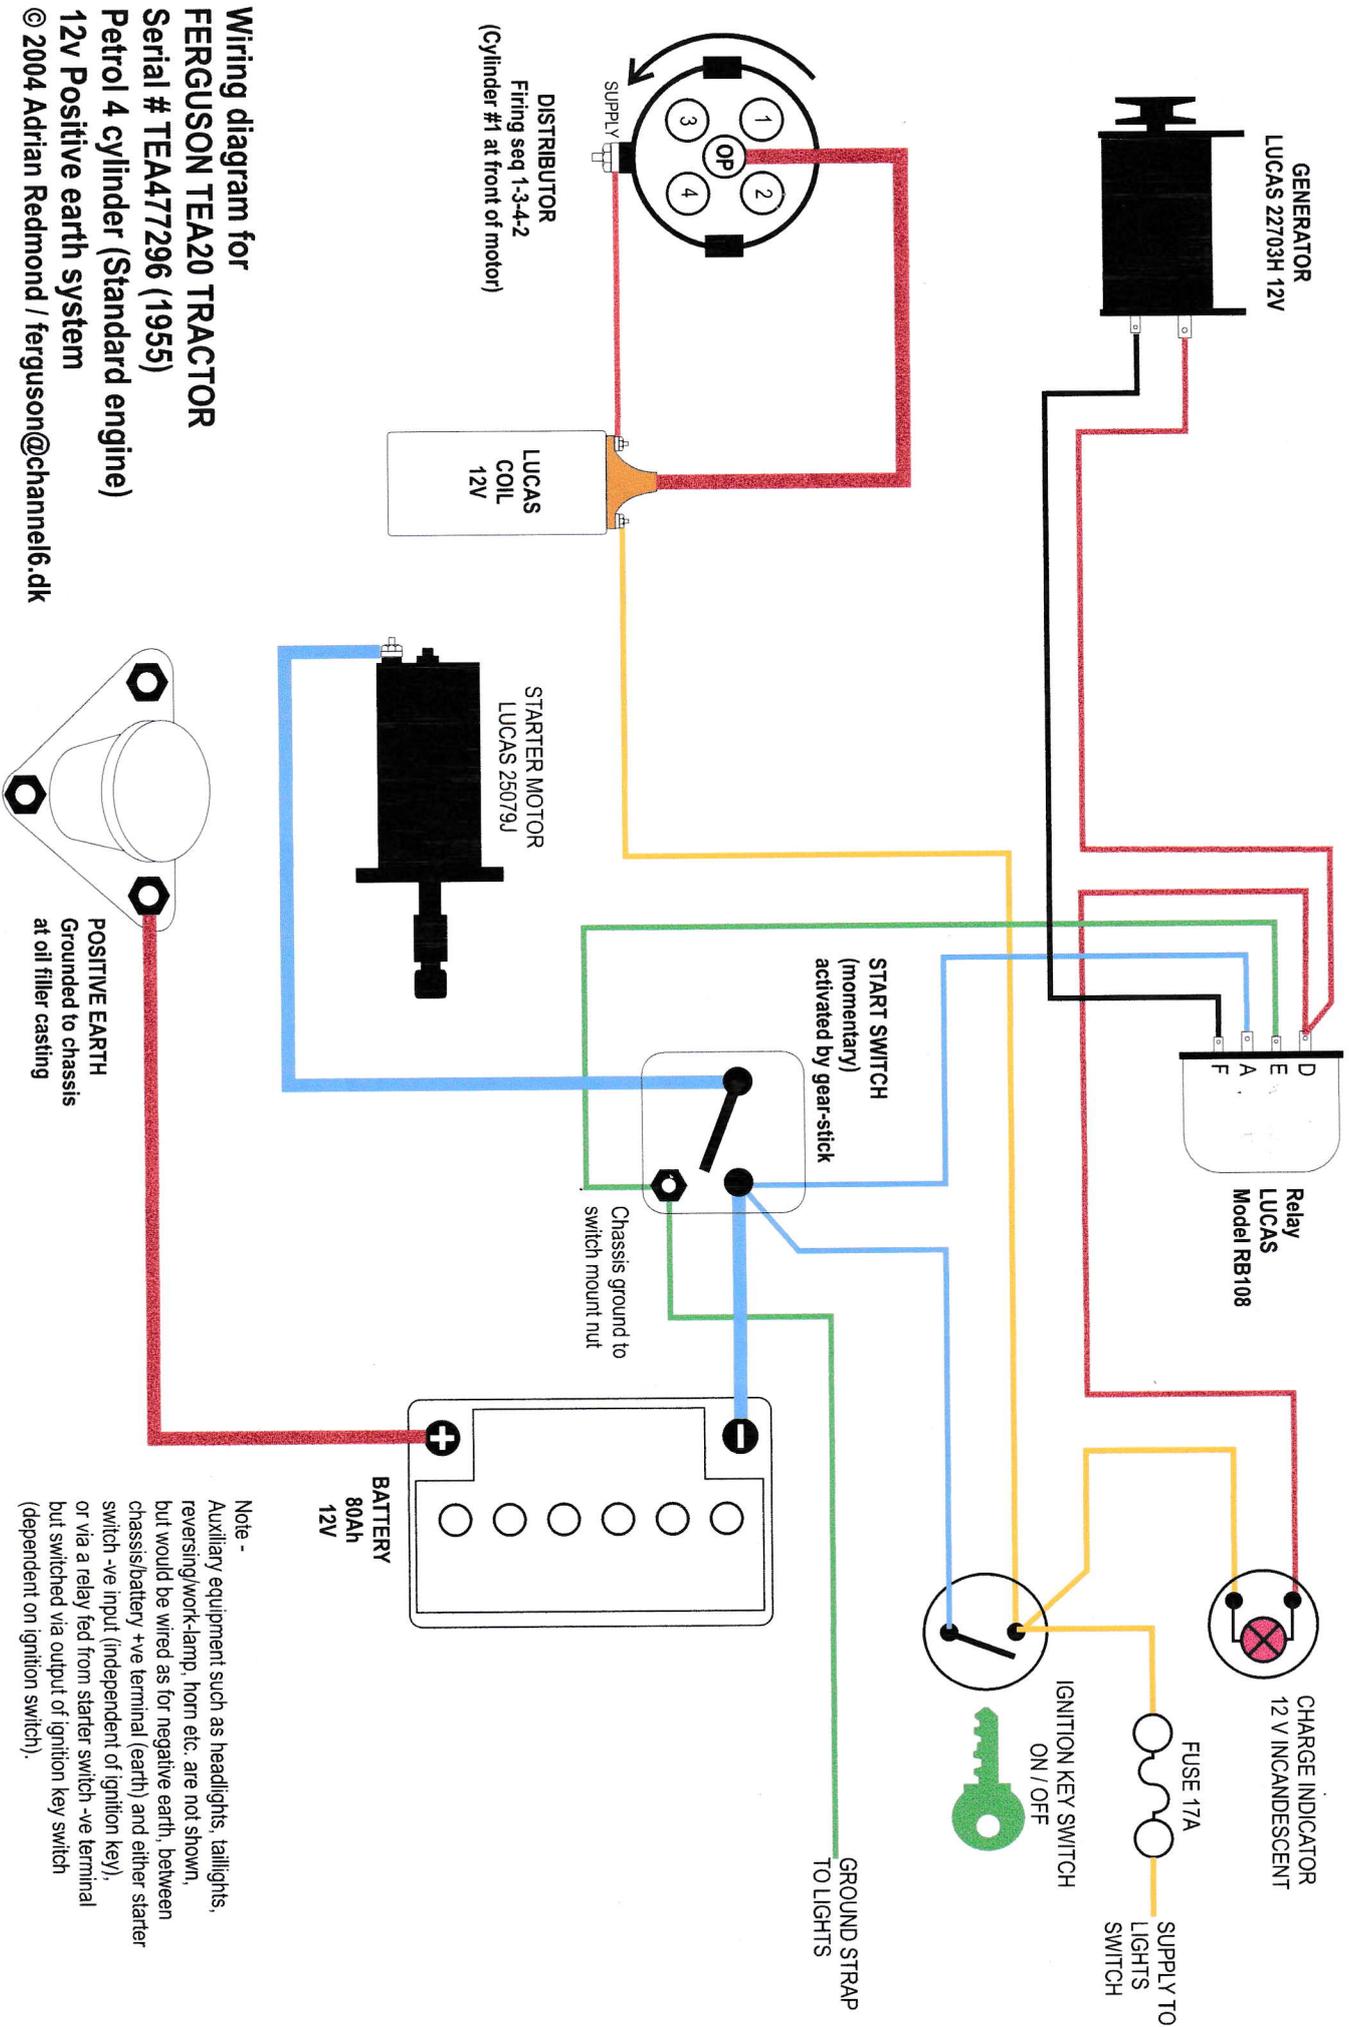

**Wiring diagram for
FERGUSON TEA20 TRACTOR
Serial # TEA477296 (1955)
Petrol 4 cylinder (Standard engine)
12v Positive earth system
© 2004 Adrian Redmond / ferguson@channel6.dk**

Note -
Auxiliary equipment such as headlights, taillights, reversing/work-lamp, horn etc. are not shown, but would be wired as for negative earth, between chassis/battery +ve terminal (earth) and either starter switch -ve input (independent of ignition key), or via a relay fed from starter switch -ve terminal but switched via output of ignition key switch (dependent on ignition switch).